

# Millivolt Valve Kits Reference Chart

Model	Btu	Quick Mount	Ignition			Flame Modulating	Use with		Valve		For Burner		Pilot			
			Match Lit	Manual Ignition	Electronic Ignition		Re-mote	Optional AC Receiver	Nat. Gas	LP Gas	Thread Type		Type			
											3/8" ID/OD	1/2" OD	Stand.	IPI		
MVK-HC	230k	Note 1	•				RCK-248, RCK I-Series, RCK K-Series	RCK-B, RCK-D	•			•		Note 3		
MVK-N	85k		•				RCK-248, RCK-I Series, RCK-K Series	RCK-B, RCK-D	•		•	•	•			
MVK-P			•							•	•	•	•			
MVK-NQM		•	•							•	•	•	•			
MVK-PQM		•	•								•	•	•	•		
MVK-EI	82k				• Battery		RCK-248, RCK-I Series, RCK-K Series	RCK-B, RCK-D	•		•	•		•		
MVK-EIMC-1	150K				• 120vac				•	Note		•		•		
MVK-EIHC-1	270K				• 120vac				•			•		•		
UMVK-NP (NG & LP)	82K		•				RCK-248, RCK-I Series, RCK-K Series	RCK-B, RCK-D	•	•	•	•	•			
MMVK-NQM	85k	•	•			•	RCK-M,	Not Available	•		•	•	•			
MMVK-PQM		•	•			•				•	•	•	•	•		
MMVK-NQMSI		•	•	• Piezo		•				•		•	•	•	•	
MMVK-PQMSI		•	•	• Piezo		•					•	•	•	•	•	

**Notes:**

- 1) **Quick Mount**- Indicates swivel connector included with kit.
- 2) **LP Conversion Kits: MVK-EI**: Use part # EILPK; **MVK-EIMC-1, MVK-EIHC-1**: Use part # 577.
- 3) **IPI Pilot**- Indicates Intermittent Pilot Ignition- pilot only on when main burner is on.

